

UWF60-1W12V
Product Feature

- Width voltage input,full power output
- Design of metal shell, improving heat dissipation performance
- Isolated design,safe and reliable
- Protections:Over load,Short circuit,over voltage
- Comply with CE/UL/SELV
- Protection grades is as high as IP67
- 5 years warranty


Application


Light box



LED Strip Light




LED Tube




Moduel

Technical Parameters


Model	UWF60-1W12V	
Input	Efficiency	87%@230VAC, Full load
	Voltage	120VAC-277VAC
	Frequency	50-60Hz
	Power Factor	>0.95@230VAC, Full load
	Standby power	<0.5W
	Current	0.63Amax@120VAC
	Inrush Current	Cold start 50A@230VAC
Output	Current/Voltage/Power	5A/12VDC/60W
	Voltage Tolerance	±1%
	Channel	1
	Start Delay	<1.5s, at 230Vac
Protection	Short Circuit	Auto recovery when failure is removed.
	Over Voltage	<36VDC Shut down the output, After restart recovers automatically.
	Over Load	<3.75A auto recovery when failure is removed.
Safety	Surge	L-N: 2kV
	Withstand Voltage	I/P-O/P:3000VAC/5mA I/P-PG:1500VAC/5mA O/P-PG:500VAC/5mA
	Safety Standards	UL8750(type"HL"),CSA C22.2 No.250.13-12 ; EAC TC004,UL60950-1,TUV EN60350-1; J61347-1,J613447-2-13 GB19510.1,GB19510.14,UL879
Others	Working Temp.	-25°C~+50°C (-13°F~122°F)
	Storage Temp.; Humidity	-40°C~85°C (-40°F~185°F) , 20-90%RH
	Tc	90°C (194°F)
	Material	Metal
	IP Rating	IP67
	Lifetime	50,000h@tc:85°C (185°F)
	Warranty Condition	5 years
	Switch Cycle	>25,000 times
	Packing Size	Net weight: 250g (0.55 lb) ±5%/PCS; 30PCS/ Carton; 7.6kg (16.75 lb) ±5%/Carton; Carton Size: 270*203*186mm (10.6*7.99*7.32 Inch)(L*W*H)
Dimension	145*40.8*22.5mm (5.7*1.6*0.89 Inch) (L*W*H)	

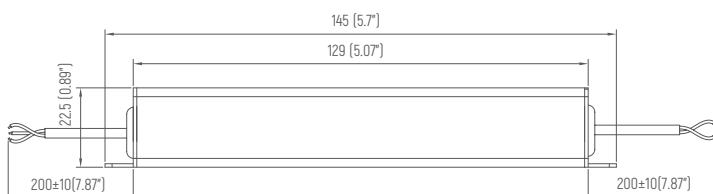Dimension(mm)


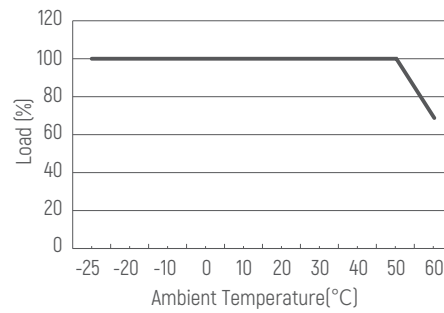
Wiring Diagram

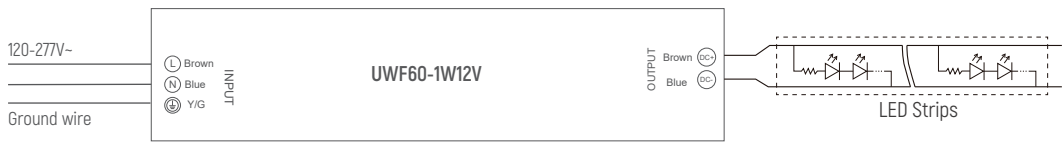

Input Derating Curve

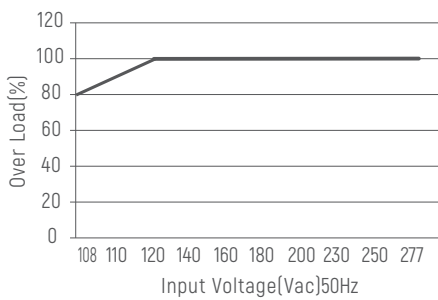

Derating Curve



Cautions

- 1 This product should cut off the input voltage and installed by a professional.
- 2 Make sure that the output voltage and current of the power supply must meet the specifications of the lamp before installation.
- 3 It is waterproof IP67, do not soak in water for a long time when using.
- 4 The driver should be installed in a well space and environment.
- 5 The sectional area of the conductor wire which connect to the driver and lamp should be enough (Recommended less than 4A/mm²).
- 6 Make sure all connections are correct and secure before powering up.
- 7 If break down during use, it must be repaired by a professional or contact the supplier.

※ The contents of this manual are updated without prior notice. If the function of the product you are using is inconsistent with the instructions, the function of the product shall prevail. Please contact us if you have any questions.