

UWF96-1W24V

Product Feature

- Wide voltage input,full power output
- Design of metal shell, improving heat dissipation performance
- Isolated design,safe and reliable
- Protections:Over load,Short circuit,over voltage
- Comply with CE/UL/SELV
- Protection grades is as high as IP67
- 5 years warranty



Application



Light box



LED Strip Light



LED Tube





Moduel

Technical Parameters

Model	UWF96-1W24V	
Input	Efficiency	88%@230VAC, Full load
	Voltage	120VAC-277VAC
	Frequency	50-60Hz
	Power Factor	>0.95@230VAC, Full load
	Standby power	<0.5W
	Current	1.1Amax@120VAC
	Inrush Current	Cold start 50A@230VAC
Output	Current/Voltage/Power	4A/24VDC/96W
	Voltage Tolerance	±4%
	Channel	1
	Start Delay	<2s, at 230Vac
Protection	Short Circuit	Auto recovery when failure is removed.
	Over Voltage	<36VDC Shut down the output, After restart recovers automatically.
	Over Load	<5.4A auto recovery when failure is removed.
Safety	Surge	L-N: 2kV
	Withstand Voltage	I/P-O/P:3000VAC/5mA I/P-PG:1500VAC/5mA O/P-PG:500VAC/5mA
	Safety Standards	UL8750(type"HL"),CSA C22.2 No.250.13-12 ; EAC TC004,UL60950-1,TUV EN60350-1; J61347-1,J613447-2-13 GB19510.1,GB19510.14,UL879
Others	Working Temp.	-25°C~+50°C [-13°F~122°F]
	Storage Temp.; Humidity	-40°C~85°C [-40°F~185°F] , 20-90%RH
	Tc	90°C (194°F)
	Material	Metal
	IP Rating	IP67
	Lifetime	50,000h@tc:85°C (185°F)
	Warranty Condition	5 years
	Switch Cycle	>25,000 times
	Packing Size	Net weight: 430g (0.95 lb) ±5%/PCS; 30PCS/Cartron; 13kg (28.67 lb) ±5%/Cartron; Carton Size: 365*215*200mm [14.37*8.46*7.87 Inch] [L*W*H]
Dimension	180*50*27mm [7.08*1.96*1.1 Inch] [L*W*H]	


Dimension(mm)

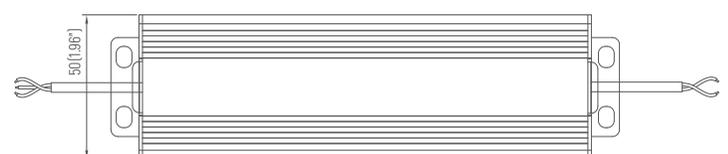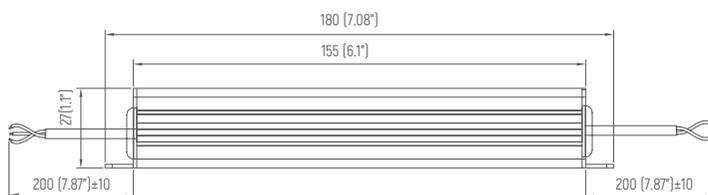


Wiring Diagram



Input Derating Curve

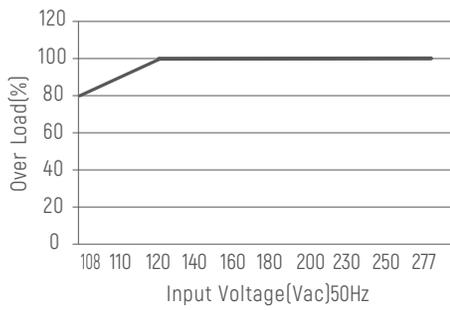

Derating Curve

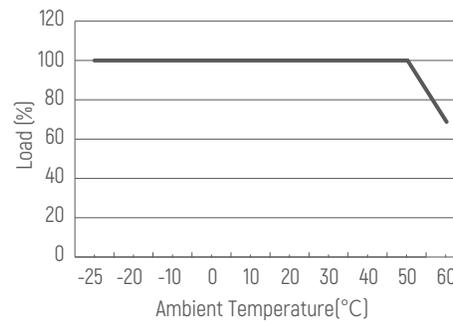

Cautions

- 1 This product should cut off the input voltage and installed by a professional.
- 2 Before installation, the voltage and current output from the power supply shall be confirmed to meet the specification requirements of the lamp.
- 3 It is waterproof IP67, do not soak in water for a long time when using.
- 4 The driver should be installed in a well space and environment.
- 5 The sectional area of the conductor wire which connect to the driver and lamp should be enough (Recommended less than 4A/mm²).
- 6 Make sure all connections are correct and secure before powering up.
- 7 If break down during use, it must be repaired by a professional or contact the supplier.

※ The contents of this manual are updated without prior notice. If the function of the product you are using is inconsistent with the instructions, the function of the product shall prevail. Please contact us if you have any questions.